

AEOLUS-3 WUS30F... series

THE NEW 3-AXIAL ULTRASONIC ANEMOMETER

INTRODUCTION

Introducing **AEOLUS**, our ultimate solution for precise wind monitoring in any environment!

This cutting-edge 3-axis ultrasonic static anemometer goes beyond the basics, delivering comprehensive data to elevate your wind measurement experience. Specifically suitable for applications such:

- Wind farm monitoring
- Automatic Weather Stations (AWS)
- Buildings, constructions and bridges control
- Ports, airports and heliports
- · Road and railway tunnels

FEATURES

Accurate measurements in any conditions

AEOLUS doesn't just measure wind speed and direction; it provides U-V-W Cartesian components and Wind Gust values. With integrated heating, it prevents snow and ice accumulation, ensuring precise measurements in all environmental conditions.

Built to last in aggressive atmospheres

Crafted with AISI 316 housing, AEOLUS stands up to even the most aggressive atmospheres, making it perfect for marine environments.

No need to worry about corrosion or wear - it's built to endure.

Low maintenance, high performance

With no moving parts, AEOLUS minimizes maintenance hassles. All sensors come factory-calibrated, eliminating the need for additional user interventions. It's the hassle-free solution for your wind monitoring needs.

CONFIGURATION & MEASUREMENT

Versatile output options

Choose from a range of isolated outputs – RS232, RS485, RS422 with NMEA, Modbus-RTU, and ASCII proprietary protocols, or go for the SDI-12 isolated output. 3 analog outputs cater to your specific needs, whether it's wind speed and direction or U-V-W Cartesian components.

Supplied with PC software, for configuration and displaying of the real time measurements.

Continuous monitoring and alignment

Featuring a barometric pressure sensor and tilt/roll sensor, AEOLUS monitors misalignments with the vertical axis, ensuring continuous accuracy. It adapts to the changing conditions to provide reliable data.

Ideal for electrically noisy environments

AEOLUS boasts high immunity to electromagnetic disturbances, making it the go-to choice for measurements in electrically noisy environments like industrial settings and wind farms.

Upgrade your wind monitoring experience with AEOLUS – where precision meets durability. Invest in the future of accurate environmental data.





ROBUST HOUSING FOR HARSH ENVIRONMENTS

The AISI 316 housing provides durability and protection, making it suitable for measurements in the toughest conditions



GREAT FLEXIBILITY

Benefit from three analog outputs, as well as RS232, RS485, RS422 and SDI-12 isolated serial outputs, allowing seamless integration with various systems



MAINTENANCE FREE TECHNOLOGY

Experience hassle-free operation with our ultrasound technology, eliminating the need for regular maintenance



ACCORDING TO THE STANDARD

- MIL-STD-810G Method 509.6 and EN ISO 9227:2017 (salt fog anti-corrosion test)
- MIL-STD-810F Method 521.2 (antiicing/freezing rain test)
- EN 60068-2-6:2008 / IEC 60068-2-6:2007 (vibration resistance test)

Measurement specifications

Wind speed Sensor Ultrasounds

> Measuring 0...85 m/s

> > range

Resolution 0.01 m/s

Accuracy ± 0.2 m/s or $\pm 2\%$ of measure, the greatest (0...65

± 3% of measure (> 65 m/s)

Wind Sensor Ultrasounds

direction

Measuring 0...360° (Azimuth) range ± 60° (Elevation)

Resolution 0.1°

Accuracy ± 2° RMSE (2 m/s < wind speed < 65 m/s)

± 3° RMSE (wind speed > 65 m/s)

Sonic Sensor Calculated quantity

temperature

Measuring -40...+60 °C

range

Resolution 0.1 °C Accuracy ±1°C

Barometric Sensor Piezoresistive

pressure

Measuring 300...1100 hPa

range

Resolution 0.1 hPa


Accuracy ± 0.5 hPa (700...1100 hPa) @ 20 °C


 $\pm 1 \, \text{hPa} \, (500...1100 \, \text{hPa}) \, / \, \pm 1.5 \, \text{hPa} \, (300...500 \,$

hPa) @ T=0...60 °C

Tilt angles Resolution 0.05°

Accuracy ± 1°

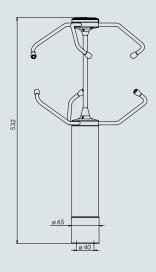

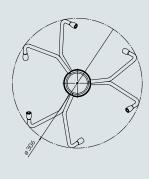

Ordering codes

WUS30F

Analog output

0/4...20 mA (0...20 or 4...20 mA is user configurable) Α=

W =0...1V0...5 V X =

0...10 V

enseca

General specifications

12...30 Vdc (15...30 Vdc for 0...10 V Instrument

output) / < 8 W power supply

24 Vdc ± 10% / 105 W Heating

power supply

Serial outputs Isolated RS232, RS485, RS422 and

SDI-12

NMEA, MODBUS-RTU, SDI-12, Communica-

tion protocols **ASCII** proprietary

Analog 3 isolated analog outputs, for wind outputs speed and direction or for speed

U-V-W cartesian components.

Output type:

0/4...20 mA, 0...1 V, 0...5 V or 0...10 V

depending on model.

Load: max. 500Ω for current output, min $10 k\Omega$ for voltage output. Analog outputs updating rate 4 Hz.

Measurement

From 1 to 4 Hz (measurements/s) interval

Wind speed Configurable from 1 s to 10 min

averaging interval

Wind Gust Configurable from 1 s to 10 min

calculation interval

Electrical 19-pole M23 male connector

connection

Operating -40...+70 °C

temperature Protection

degree

Anti-MIL-STD-810G Method 509.6 (48 hours of exposure + 48 hours of corrosion test

MIL-STD-810F Method 521.2

drying)

EN ISO 9227:2017

IP 67 (EN 60529)

Anti-icing/ freezing rain

test

Vibration EN 60068-2-6:2008 resistance test IEC 60068-2-6:2007

Survival speed 100 m/s Weight 2.6 kg approx.

AISI 316 Housing

Installation on mast Ø 40 mm external and Ø 36

mm internal