

HD408T, HD4V8T






HD408T..., HD4V8T... RELATIVE OR DIFFERENTIAL ATMOSPHERIC PRESSURE TRANSMITTERS

HD408T, HD4V8T are analog output relative or differential atmospheric pressure transmitters; they are used in all those applications where non corrosive air or gas need to be monitored, with pressure fields from 10 mbar to 200 mbar. The piezoresistive sensor gives extremely precise and stable measurements of the applied differential pressure, with excellent repeatability, low hysteresis, and very good temperature stability.

The output signal of the sensor is conditioned to provide either a current output (model HD408T) or a voltage output (model HD4V8T) linearly proportional to the applied differential pressure.

The transmitters are ready to use as they have been calibrated at the factory. They are used to monitor clean room barometric pressure, to control filters, to measure flows (employment with the Pitot tube), for packing and packaging machines, and to control ventilation.


Technical specifications @ 20°C and 24Vdc		
	HD408T	HD4V8T
Sensor	Piezoresistive	
Measurement range	10, 20, 50, 200 mbar ±10, ±20, ±50, ±200 mbar	
Output	420 mA	010 Vdc; 05 Vdc, 15 Vdc (depending on the model)
Accuracy	±0.5 % f.s. @ 20 ℃	
Temperature drift	< 1% f.s., zero; <1% f.s., span from -20 to +60 °C (from -4 to 140 °F)	
Long-term stability	< 1 % f.s. over 6 months at 20 °C	
Startup time	1 sec. at 99% of full scale reading	
Response time	< 10 ms until it reaches the stated precision by applying a step pressure level	
Power supply	830 Vdc	1640 Vdc or 24 Vac with output 010 Vdc 1040 Vdc or 24 Vac with outputs 05 Vdc, 15 Vdc
Absorption	< 4 mA	20 mA @ 20°C, 24 Vdc
Load resistance	$R_{Lmax} = 727 \Omega a$ $24Vcc$ $R_{Lmax} = \frac{Vdc-8}{22 \text{ mA}}$	Minimum input resistance 10kΩ
Working temperature	-20+60 °C	
Storage temperature	-20+80 °C	
Compatible media	Only air and non aggressive dry gases	
Overpressure limit	350 mbar for the models 10, 20, 50 mbar 3 x f.s. for the 200 mbar model	
Pressure connection	With Ø 5 mm flexible tube	
Electric connection	Screw terminal box	
Housing	Material: Polycarbonate blend (PC + ABS) Dimensions: 66 x 60 x 35 mm	
Weight	≈120 g depending on the model	
Protection degree	IP67	

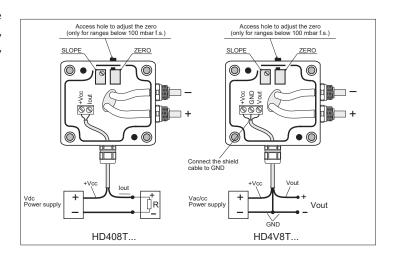


INSTALLATION

In all models the sensor and electronic parts are housed in a robust case in polycarbonate blend (PC + ABS) with IP67 degree of protection. Opening the cover, the holes that allow to secure the transmitter's base directly to a panel or a wall, become available.

HD408T, HD4V8T can be mounted in any position, the deviation of the zero due to the mounting position is in the worst case (10 mbar range) less than 1% f.s. and can be corrected with an appropriate regulating potentiometer, that can be accessed from outside (for models with ranges below $100 \, \text{mbar}$).

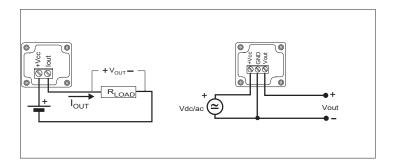

DIMENSIONI

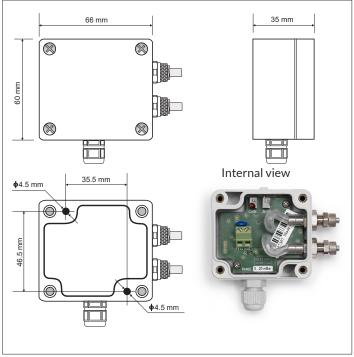

ORDERING CODES

